
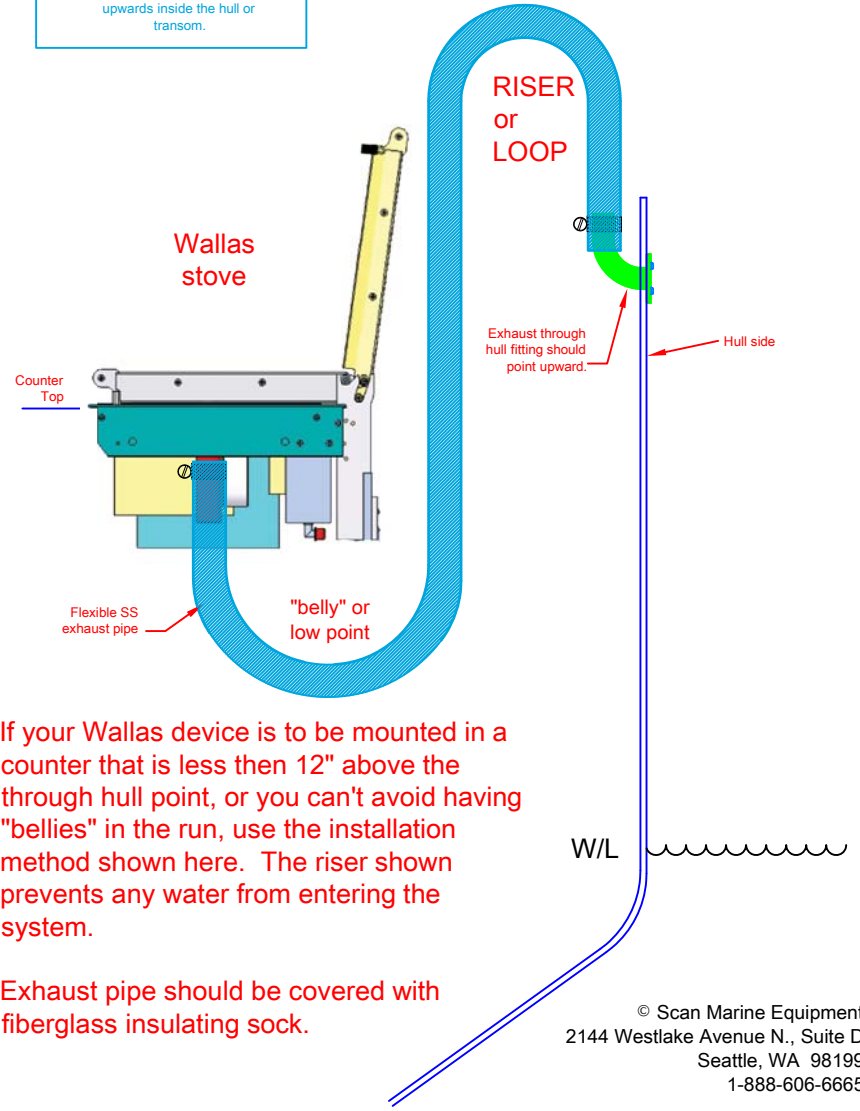


If your Wallas device is to be mounted in a counter that is more than 12" above the through hull point, simply route the exhaust pipe from the stove to the through hull. Try to avoid any low points or "bellies" in the run.

Exhaust pipe should be covered with fiberglass insulating sock.

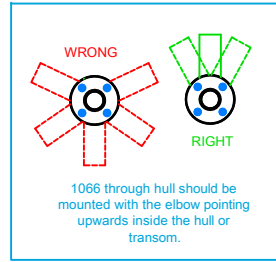

If your Wallas device is to be mounted in a counter that is less than 12" above the through hull point, or you can't avoid having "bellies" in the run, use the installation method shown here. The riser shown prevents any water from entering the system.

Exhaust pipe should be covered with fiberglass insulating sock.