


# Typical Wallas Dt heater installation (away space) w/ defog.

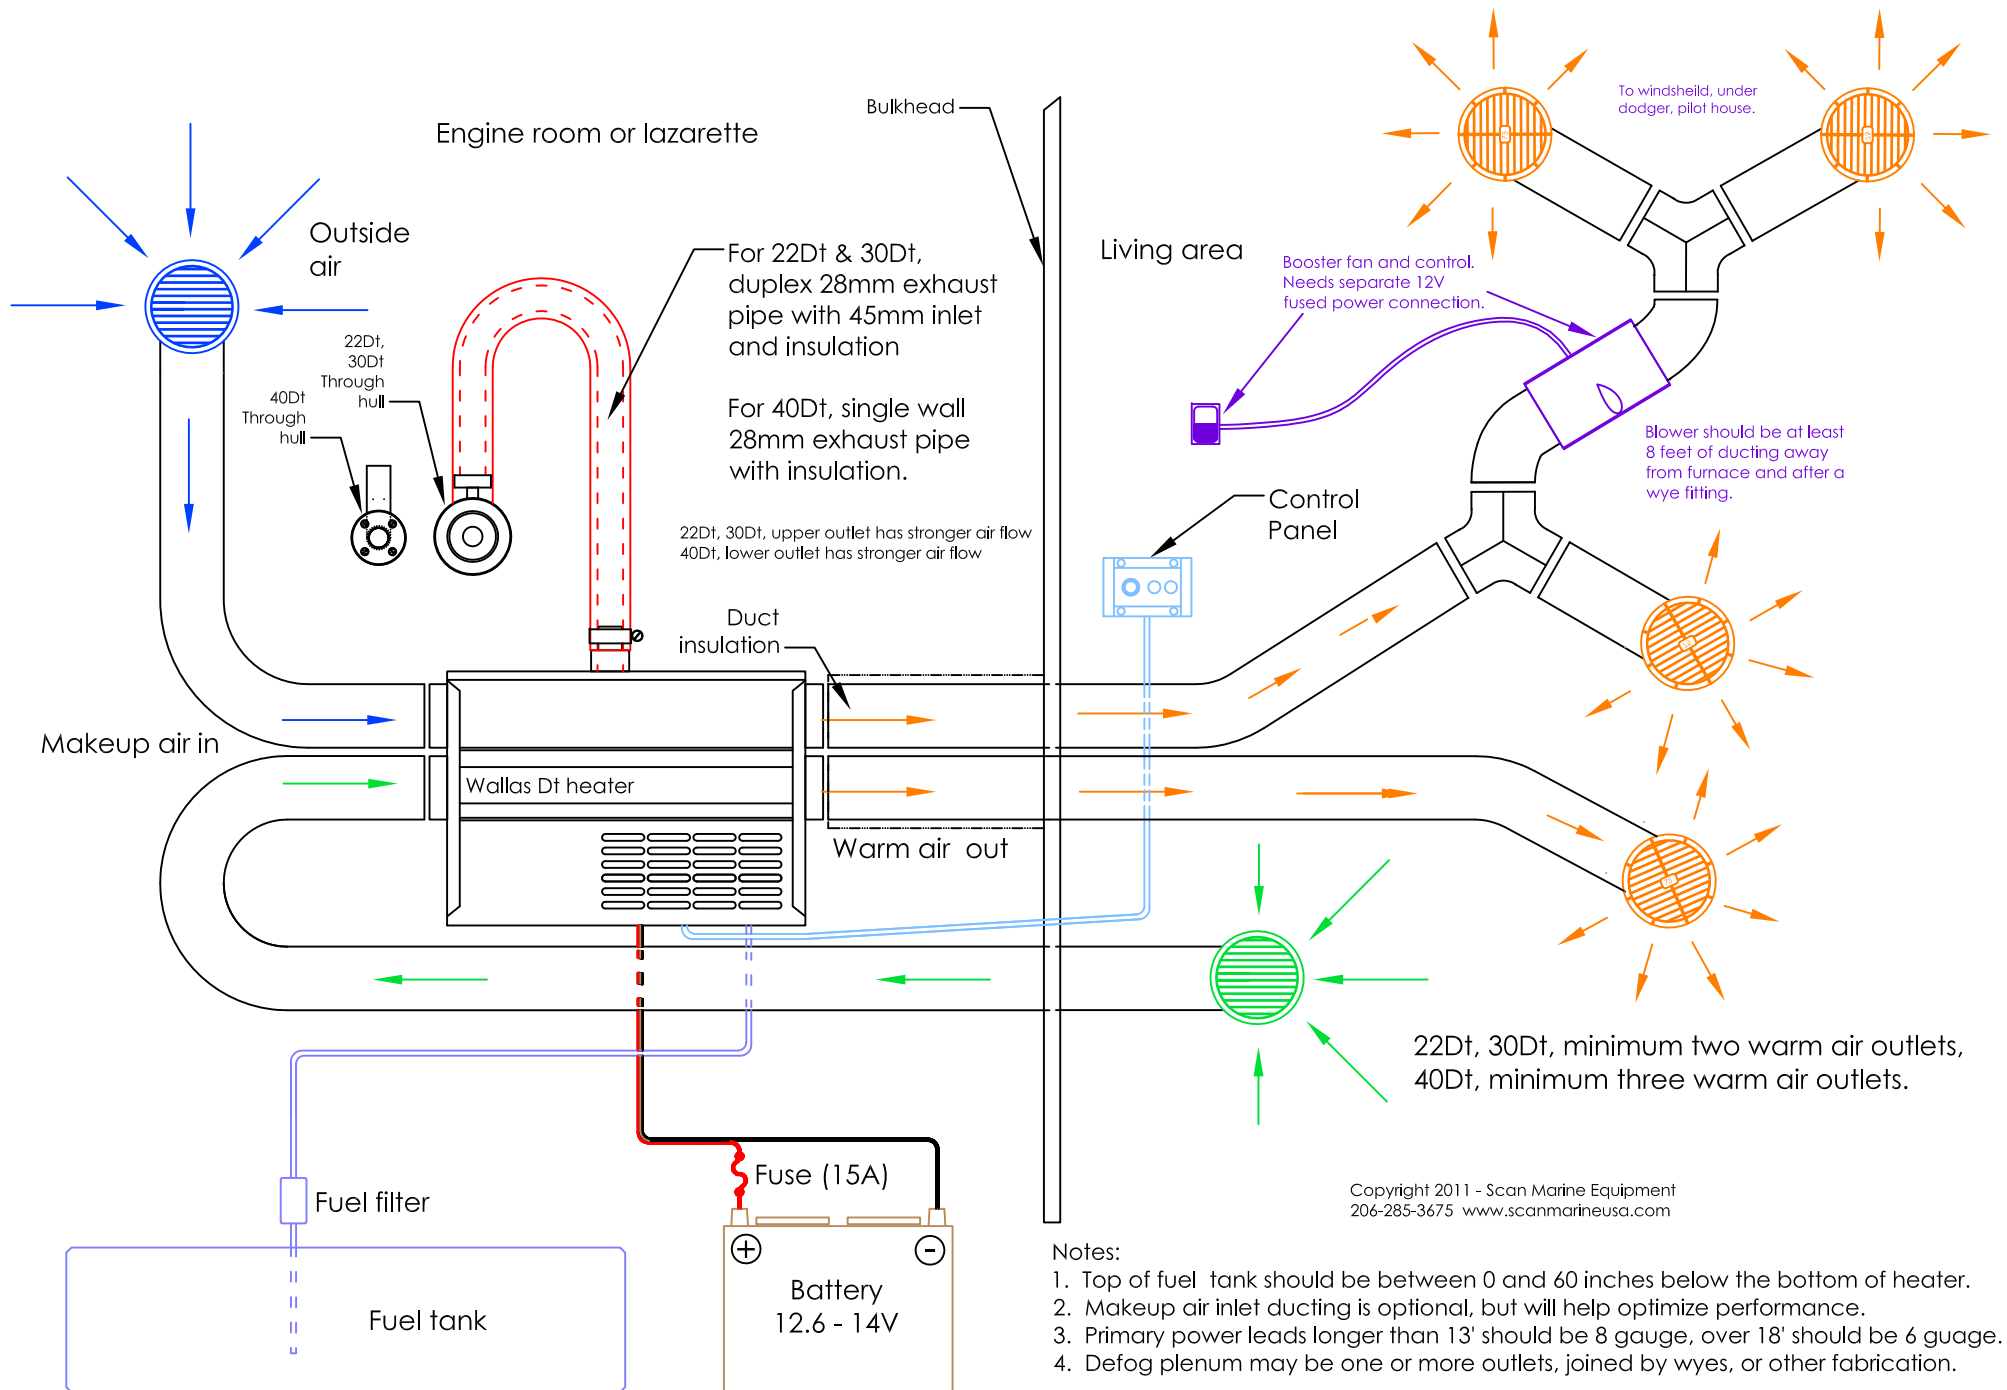

## Notes:

1. Top of fuel tank should be between 0 and 60 inches below the bottom of heater.
2. Makeup air inlet ducting is optional, but will help optimize performance.
3. Primary power leads longer than 13' should be 8 gauge, over 18' should be 6 gauge.
4. Defog plenum may be one or more outlets, joined by wyes, or other fabrication.